


*****Remove old cartridge, flush out faucet by turning on water for 1-2 seconds. This prevents debris from damaging the new cartridge. *****

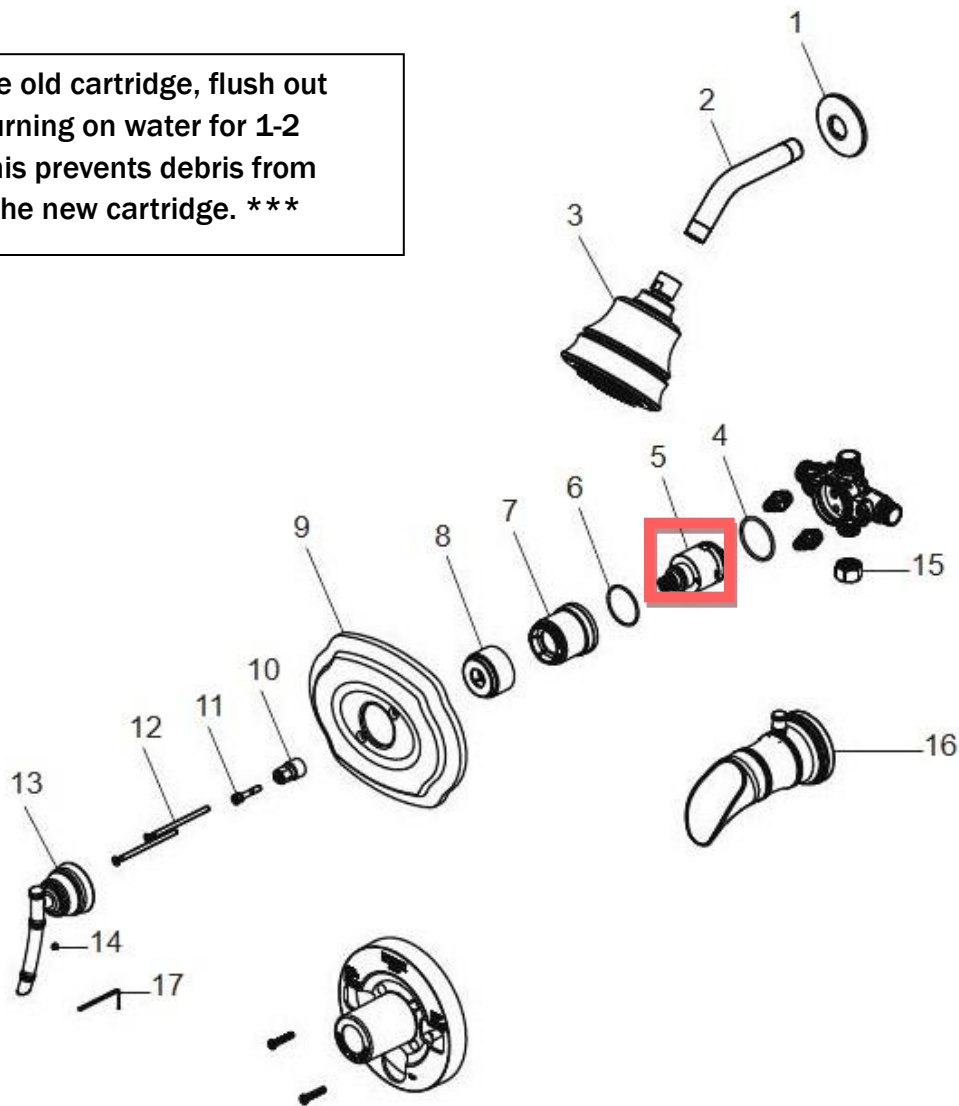

Adjust the desired maximum water temperature

Place handle (F) and inverter (1) onto the cartridge stem.

Slowly turn the valve stem (2) counterclockwise to adjust the desired maximum water temperature.

